

## Remote Kit – Inbuilt USB/BT/FM

16x2 Display – Version 2.0

## Recommended board Operating Condition:0,+12VDC,2A

- Independent digital volume control of 5.1 channels: 0 to -99 dB(50 Steps, 2dB per step)
- Independent Gain Control(Input Gain & Output Gain) of 5.1 channels. 0 to +14 dB (7steps, 2dB per step)
- Tone Control for Bass/Treble. -14 to +14dB. (14 steps, 2dB per step)
- Default 3 L/R input & one 5.1 Input. Additional Boards of Opt/Coax/HDMI can add according the version update.
- Default 5.1 Audio out for the above all inputs. Remote Option given for 2.1 Audio out.
- One time 5.1 Input settings in "Admin Settings" for Market Boards like HD Audio Rush, Etc.
- Last Memory of Volume, Gain recalls & Welcome Name automatically.
- Mute/Pause/LCD Back Light off, will be released automatically once you click Volume button.
- Stand-by/Pause will be released by First Click(Press) of Rotary Encoder.
- "Test Tone" provided on long press of "Gain" button. Before do it, play any one song by USB/BT/FM.
- According to the input Remote button few will work, few will not work.
- Normal Re-set & Factory Re-set provided.



- Supported Audio file formats: mp3, Wav, FLAC, WMA, DTS(stereo only)
- Lyrical display on 16x2 LCD
- Song Selection can be by number. Provided song selection: Next, Previous, Next Folder, Previous Folder.
- Play/Pause, Mute. Play File option given (Single, Random, All etc.). Supports Equalizer (6 Type).











- Press "Play/Pause" button for Auto Tune. Once it completed you can Select Next/Prev Channels.
- FM TUNE Single Freq. adjustment:- /+ button given. The same button for USB too for Next/Previous Folder.




## **BLUETOOTH**

- ❖ Version 5.0
- ❖ Name "GEM TECH" auto detects on mobile to connect.
- Remote control for audio : Next, Previous, Play/Pause.
- Audio AC3, AAC Supported.






| Default | FT003<br>V1 | FT003<br>V2 | A. Rush | Ayino | DA51A |
|---------|-------------|-------------|---------|-------|-------|
| 5.1     | ОРТ         | ОРТ         | OPT-1   | ARC   | ОРТ   |
|         | COAX        | COAX        | OPT-2   | номі  | ARC   |
|         | ARC         | ARC         | COAX    | ОРТ   | COAX  |
|         |             | AUX         | AUX     | COAX  |       |
|         |             |             |         | ВТ    |       |
|         |             |             |         | PC    |       |
|         |             |             |         | USB   |       |

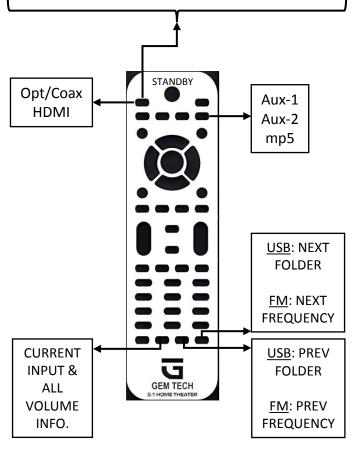


Use Gem Tech's **Power Converter Board**to avoid

Humming & Display issues.



| Aditional support of PINs from Microcontroller for External board On/Off & Switching |            |   |   |                    |           |      |  |
|--|------------|---|---|--------------------|-----------|------|--|
| Pulse Support  | Pin        | Purpose / Board   | C   | ondition           | Pulse     | Volt |  |
| Power Control  | R0         | Transformer   |   | Standby            | High      | 3.3v |  |
|  |            | Transformer   | Play  |                    | Low       | 0v   |  |
| Power Control  | R1         | Input: HD Audio Rush or   | No  | t Selected         | High      | 3.3v |  |
|  |            | DA51A or FT003-V1 or FT003-   | 5   | Selected           | Low       | 0v   |  |
|  | B2         | Gem Tech Board  | Play  |                    | High      | 3.3v |  |
| Sanatan Partenting P. 1  |            | Gem Tech Board  | Standby or Mute   |                    | Low       | 0v   |  |
| Speaker Protection Board   |            | Other Market Boards can be  | Standby or Mute   |                    | High      | 3.3v |  |
|  | В6         | Other Market Boards can be  | Play  |                    | Low       | 0v   |  |
| IR Control   | IR         | Market Board  |   |                    |           |      |  |
|  | Opt1       |   | Solder 3 lines to Concern LED's -ve Line  |                    |           |      |  |
|  | Opt2       |   | and 1 SW line, 1 GND.   |                    |           |      |  |
|  | Cax        | HD Audio Rush   | For Input Selection Press First Check button Opt/Coax on remote & 1 or 2 or 3 or 4. |                    |           |      |  |
|  | SW         |   |   |                    |           |      |  |
| Input Switching  | GND        |   | Opticoax  | on remote & 1 of 2 | 2 01 3 01 | 4.   |  |
|  | B3         | DA51A Board   |   |                    |           |      |  |
|  | B4         |   | В   |                    |           |      |  |
|  | <b>B</b> 5 | FT003 V1 or FT003 V2  | A   |                    |           |      |  |
|  | A0         |   | SW  |                    |           |      |  |
|  | CS         |   | PCM   |                    |           |      |  |
| Audio File Format  | C3         | FT003 V2  | DD  |                    |           |      |  |
|  | RE         |   | DTS   | S                  |           |      |  |
|  | GND        |   |   |                    |           |      |  |
| Ground Pins  |            | Use any one of this pin while you attach Gem Tech Board or Market Board |   | ard                |           |      |  |
|  |            |   |   |                    |           |      |  |

| Remote                      | Remote button functions           |  |  |  |  |  |
|-----------------------------|-----------------------------------|--|--|--|--|--|
| Gem Tech's                  | mp5 Vire<br>Brand's<br>Slim Board | Ayino Board  |  |  |  |  |
| Opt/Coax                    |                                   | Inputs: ARC,<br>HDMI, Opt,<br>Coax, BT,<br>PC, USB |  |  |  |  |
| Mode                        | Mode                              |  |  |  |  |  |
| 2.1/5.1                     | Menu                              |  |  |  |  |  |
| Ch-                         | Previous                          | Previous   |  |  |  |  |
| Tune+                       | Up                                |  |  |  |  |  |
| Ch+                         | Next                              | Next   |  |  |  |  |
| Play/Pause(FM<br>Scan Next) | Play/Paus                         | Play/Paus  |  |  |  |  |
| Esc, Ch-                    | Left                              |  |  |  |  |  |
| Gain                        | Enter                             |  |  |  |  |  |
| Esc, Ch+                    | Right                             |  |  |  |  |  |
| BackLight                   | FM Scan                           |  |  |  |  |  |
| Esc,Tune-                   | Vol-                              |  |  |  |  |  |
| Tune-                       | Down                              | Tune -   |  |  |  |  |
| Esc,Tune+                   | Vol+                              | Tune +   |  |  |  |  |
| Eq                          | Eq                                |  |  |  |  |  |
| 1                           | 1                                 | Base -   |  |  |  |  |
| 2                           | 2                                 | Move Up  |  |  |  |  |
| 3                           | 3                                 | Base +   |  |  |  |  |
| 4                           | 4                                 | Move Left  |  |  |  |  |
| 5                           | 5                                 | Enter  |  |  |  |  |
| 6                           | 6                                 | Move Right   |  |  |  |  |
| Repeat                      | Rep                               |  |  |  |  |  |
| 7                           | 7                                 | Treble -   |  |  |  |  |
| 8                           | 8                                 | Move Down  |  |  |  |  |
| 9                           | 9                                 | Treble +   |  |  |  |  |
| 0                           | 0                                 |  |  |  |  |  |
| USB Folder-Prev             | Movie                             |  |  |  |  |  |
| <b>USB Folder-Next</b>      | Music                             |  |  |  |  |  |

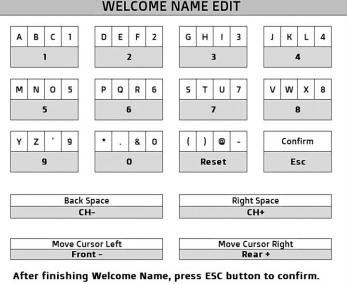



QR code for Wire Connection & Google drive file link

 $\otimes$ 

| NB: don't go admin settings while input mp5 selected. |  |                   |                       |  |  |  |
|---|--|-------------------|-----------------------|--|--|--|
| Admin Settings :-                                     |  |                   |                       |  |  |  |
| 1   | Software version                       | Press GAIN, EQ    | Current Ver: 2.0      |  |  |  |
| 2   | Factory Reset                          | Press GAIN, EQ, 0 |                       |  |  |  |
| 3   | Gain Settings                          | Press GAIN, EQ, 1 |                       |  |  |  |
| 4   | Welcome Name Settings                  | Press GAIN, EQ, 2 |                       |  |  |  |
| 5   | HD Board Settings(Opt/Coax/HDMI)       | Press GAIN, EQ, 3 | D ECC +C              |  |  |  |
| 6   | LCD Back Light Auto On/Off Settings    | Press GAIN, EQ, 4 | Press ESC to confirm. |  |  |  |
| 7   | Standby Enable/Disable Settings        | Press GAIN, EQ, 5 |                       |  |  |  |
| 8   | Test Tone check for Individual Channel | Press GAIN, EQ, 6 |                       |  |  |  |

## Can attach these Gem Tech Boards, Market Boards

Gem Tech's 6 Ch Spk Prot. Board



Gem Tech Digital Switch



FT003-v1, FT003-v2



**HD Audio Rush** 







